


## K-BUS<sup>®</sup> KNX IP Interface\_V1.2

BNIP-00/00.1

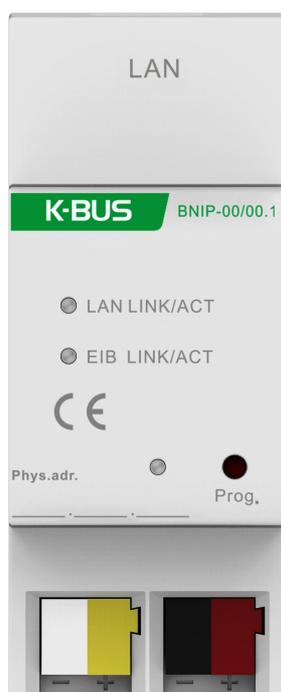

**KNX/EIB Home and Building Control System**

# Attentions

1. Please keep devices away from strong magnetic field, high temperature, wet environment;



2. Do not fall the device to the ground or make them get hard impact;



3. Do not use wet cloth or volatile reagent to wipe the device;



4. Do not disassemble the devices.

# Contents

<b>Chapter 1 Summary</b> -----	<b>1</b>
<b>Chapter 2 Technical Data &amp; Dimension and Connection Diagram</b> -----	<b>2</b>
<b>2.1 Technical data</b> -----	<b>2</b>
<b>2.2 Dimension diagram</b> -----	<b>3</b>
<b>2.3 Connection diagram</b> -----	<b>3</b>
<b>Chapter 3 Parameter setting description in the ETS</b> -----	<b>4</b>
<b>3.1 Parameter window “IP settings”</b> -----	<b>4</b>
<b>3.2 Parameter window “IP address”</b> -----	<b>5</b>

## Chapter 1 Summary

The KNX IP Interface is designed for an intelligent building control system, which is used for facilitating communication between the Ethernet network and the KNX system.

The KNX IP Interface connects the KNX system with the Ethernet network via an Ethernet RJ45 interface in the front. It serves as an interface between KNX installations and IP networks and can configure, parameterize and commission the KNX installation as well as bus monitor via the LAN using the ETS (ETS3 or later) software.

For operation an additional 30V DC supply is necessary. The bus connection and auxiliary power supply connection are carried out via using KNX bus connection terminals.

The device adopts an Ethernet RJ45 interface to connect with LAN network. The network interface can be operated with a transmission speed of 10/100Mbit/s Auto Sensing.

The IP address of the device can be fixed or can be received from a DHCP server. If you need to remain the IP address static or here no DHCP server on the network, you can assign a fixed IP address to the device via ETS. The device can program itself and support 5 KNX IP client connections.

The KNX IP Interface is able to use the Engineering Tool Software ETS (ETS3 or later) with a VD4 file to allocate the physical address and set the parameter. The factory default physical addresses are 15.15.255, and the address can be modified directly via local interface settings of ETS.

The KNX IP Interface is a modular installation device. It can be installed in the distribution board on 35mm mounting rails according to EN 60 715.

This manual provides the technical information about the KNX IP Interface as well as assembly and programming in detail for users, and explains how to use the interface device by the application examples.


## Chapter 2 Technical Data & Dimension and Connection Diagram

### 2.1 Technical data


<b>Power supply</b>	Operation voltage	21-30V DC, via the KNX bus
	Current consumption, bus	<12mA
	Power consumption, bus	<360mW
	Auxiliary power supply	20-30V DC
	Auxiliary power consumption	<2.5W
<b>Connections</b>	KNX	Via bus connection terminal (red/black)
	External power supply	Via bus connection terminal (yellow/white)
	LAN	RJ45 socket for 10/100Base-T, IEEE 802.3 network, Auto Sensing
<b>Operating and display</b>	Programming LED and button	For assignment of the physical address
	Green LED flashing	Indicate the application layer running normally
	LAN LINK LED ON	Network connection indicator
	LAN LINK LED flashing	Telegram traffic between the device and network
	EIB LINK LED ON	KNX bus connection indicator
	EIB LINK LED flashing	Telegram traffic between the device and KNX bus
<b>Temperature</b>	Operation	-5 °C ... + 45 °C
	Storage	-25 °C ... + 55 °C
	Transport	- 25 °C ... + 70 °C
<b>Ambient</b>	Humidity	<93%, except condensation
<b>Design</b>	Modular installation device, on 35mm mounting rail	
<b>Dimensions</b>	90 mm×36 mm×64mm	
<b>Weight</b>	0.1KG	
<b>Housing,</b>	Plastic housing, beige	

Application program	Max. number of communication objects	Max. number of group address	Max. number of associations
IP Interface	0	0	0

## 2.2 Dimension diagram

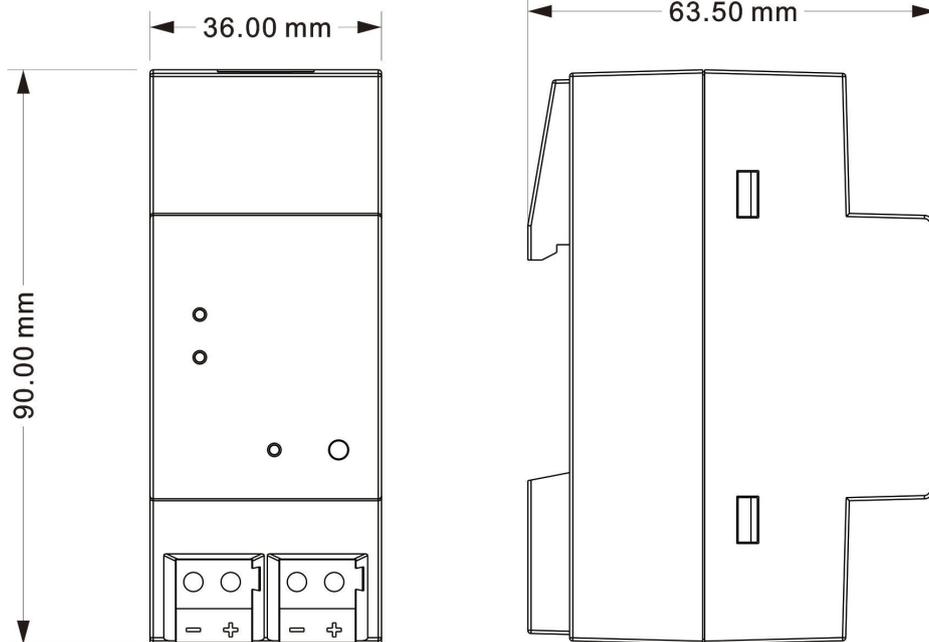

## 2.3 Connection diagram

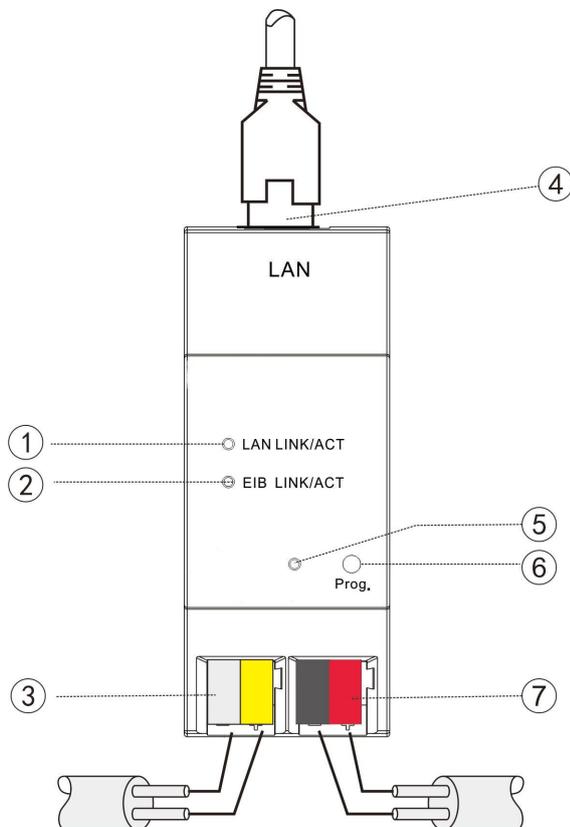

- ① LAN LINK ON, indicate that network connect normally  
LAN LINK flashing, indicate that telegram traffic is ongoing. Network activity is indicate by the LED
- ② EIB LINK ON, indicate that KNX bus connect normally  
EIB LINK flashing, indicate that telegram traffic is ongoing, which is indicate by the LED
- ③ Auxiliary power supply connection
- ④ LAN connection
- ⑤ Programming LED, LED red light up for assignment of physical address, LED green flashes for application layer running normally
- ⑥ Programming button
- ⑦ KNX bus connection terminal

## Chapter 3 Parameter setting description in the ETS

### 3.1 Parameter window “IP settings”

Parameter window “IP setting” is shown in Fig. 3.2.

Because IP Interface and RS485 converter use the same product database, so before setting IP Interface parameters, you must select devices first, as follow (Fig.3.1):



Fig 3.1 Choose device

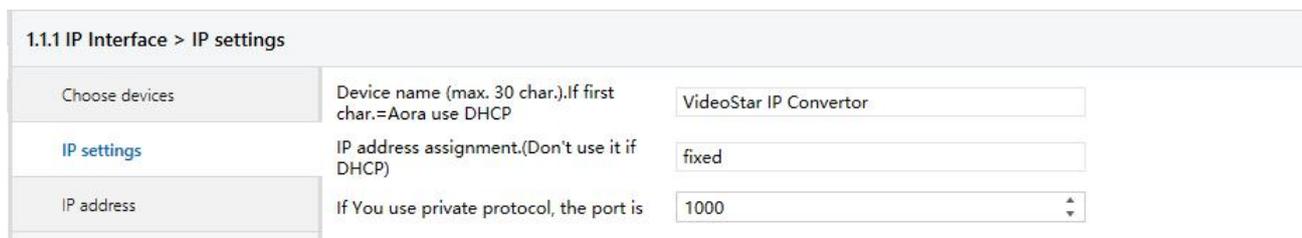


Fig.3.2 parameter window “IP settings”

#### Parameter “Device name (Max. 30 Char.), If first char. = ‘A’ or ‘a’ use DHCP”

The parameter defines the name of the IP Interface to identify the device on the LAN. Here can entry a maximum of 30 characters in length.

#### The follow points apply for setting:

If the first character is A or a, the device will work in DHCP mode, and can get an IP address automatically from network. And the character will not disappear in the device’s name.

If the first character is F or f, the IP address of the device need set by manual. And the character will not disappear in the device’s name.

For example:

If your device name is “Family”, and you want to use DHCP mode, Input string “AFamily”. If you want to use Fix mode, Input string “FFamily”.

If your device name is “Audio”, and you want to use DHCP mode, Input string is “AAudio”. If you want to use Fix mode, Input string is “FAudio”. If you input “Audio”, then the device name is “udio”, and use DHCP mode.

If your device name is start with another character, you can input the device name directly, with Fix IP address mode, without with the “F” or “f” start. If you want to use DHCP mode, you only add “A” or “a” at ahead of your device name.

**Parameter “IP address assignment (Don’t use it if DHCP)”**

The parameter indicates that the IP address assignment of the Interface is fixed if the DHCP mode is not used.

If the DHCP mode is used, the parameter is invalid.

The fixed IP address can be assigned in the follow parameter window “IP address”, see fig. 3.3.

**Parameter “If you use private protocol, the port is”**

The parameter is not used.

### 3.2 Parameter window “IP address”

Parameter window “IP address” is shown in fig. 3.3. Here set network connection information, such as IP address, Subnet mask and Default gateway.

If the IP Interface use DHCP mode, the parameters are invalid in the window.

1.1.1 IP Interface > IP address	
Choose devices	IP address
IP settings	Byte 1: 192
IP address	Byte 2: 168
	Byte 3: 1
	Byte 4: 10
	Subnet mask
	Byte 1: 255
	Byte 2: 255
	Byte 3: 255
	Byte 4: 0
	Default gateway
	Byte 1: 192
	Byte 2: 168
	Byte 3: 1
	Byte 4: 1

Fig 3.3 parameter window “IP address”

**Parameter "IP address"**

The parameter defines the IP address of the IP Interface, the IP address is unique on the LAN, to avoid collide. Option: **Byte x: 0...255**

The IP address should be entered in a byte-by-byte manner, e.g. as follows for address 192.168.1.10:

**Byte1: 192**

**Byte2: 168**

**Byte3: 1**

**Byte4: 10**

**Parameter "Subnet mask"**

The parameter defines the subnet mask of the IP Interface. The subnet mask must be set to reflect the number and structure of the subnet. Option: **Byte x: 0...255**

In a small network the subnet mask 255.255.255.0 should be set as follows:

**Byte1: 255**

**Byte2: 255**

**Byte3: 255**

**Byte4: 0**

**Parameter "default gateway"**

The parameter defines the default gateway. The default gateway must be the same network segment with the IP address. Option: **Byte x: 0...255**

The default gateway 192.168.1.1 should be set as follows:

**Byte1: 192**

**Byte2: 168**

**Byte3: 1**

**Byte4: 1**